

## OUTDOOR FIRE

# Burton™

The Burton delivers a commanding presence regardless of its location. Before a backdrop of the rugged southern peaks or beside a beachfront view, the Burton's modern and minimalist shape ensures it remains a feature of your outdoor entertaining area. Our largest fireplace with the widest firebox means a warm and relaxing experience for all of your guests.

### Burton package includes:

- 1 x Prefabricated reinforced concrete structure
- 1 x 6mm black steel firebox
- 1 x Black stainless steel flue (1500h x 350ø)

**Dimensions:** 2850h x 1800w x 700d

**Weight:** 1500kg



Model displayed with optional accessories



BURTON™


# Dimensions



Model displayed with optional accessories

BURTON™

# Dimensions

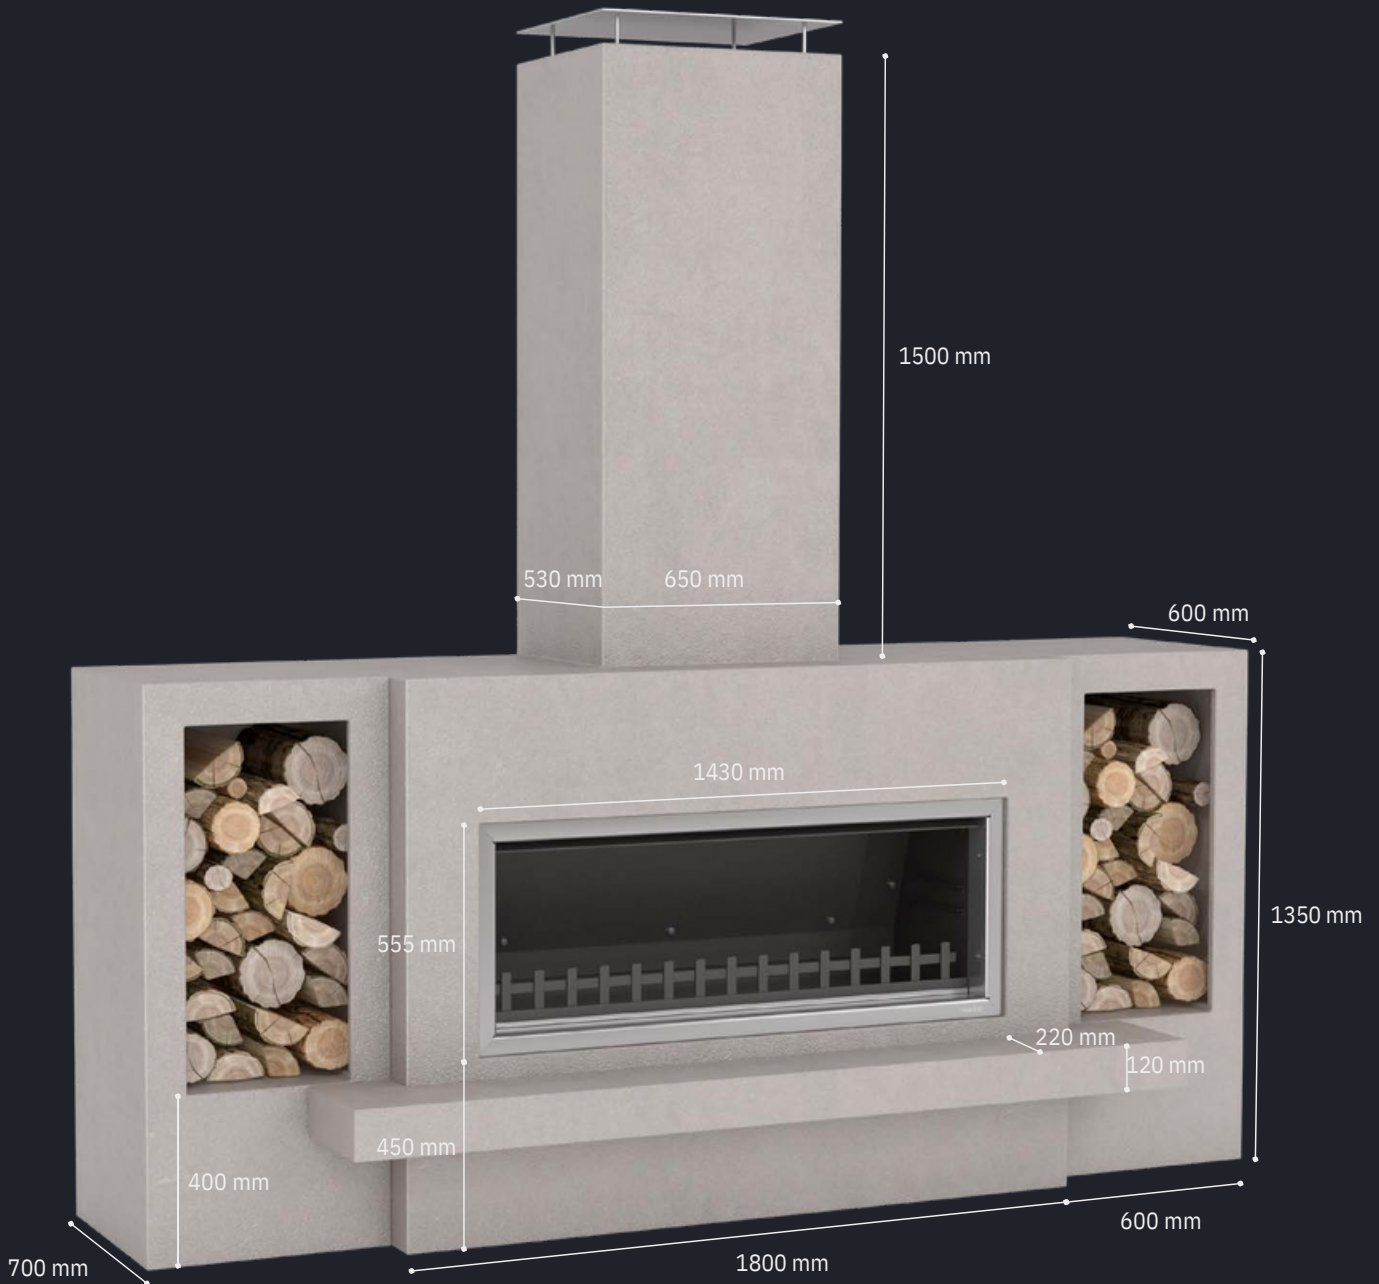

Model displayed with optional accessories

**BURTON™**

# Installation

Delivered as a concrete shell with firebox and your choice of accessories. There are just six simple steps to installing a Trendz Outdoor Fireplace.



## Step 1

Contract out or DIY a concrete pad for the fireplace to sit on.



## Step 2

Trendz delivers the fireplace to a depot. A Hiab truck is required to bring the fireplace to your site and place the fireplace onto your concrete pad.



## Step 3

Fill the inside of your fireplace from the bottom up to the opening with concrete.



## Step 4

Your fireplace comes bare concrete. Attach accessories, then plaster or clad.



## Step 5

Assemble the steel firebox.



## Step 6

Enjoy!

*These installation instructions are a guide only. Contact Trendz to get a full set of detailed installation instructions.*

**BURTON™**

# Installation

## with plaster & paint finish

The Burton fireplace can be delivered already plastered and painted, making the installation process faster. Talk to our team to discuss your plaster and paint options.



### Step 1

Contract out or DIY a concrete pad for the fireplace to sit on.



 **30**  
mins

### Step 2

Trendz delivers the fireplace to a depot. A Hiab truck is required to bring the fireplace to your site and place the fireplace onto your concrete pad.



 **20**  
mins

### Step 3

Fix fireplace to the concrete pad with brackets if needed.



 **20**  
mins

### Step 4

Attach wood boxes if ordered with the fireplace.



 **05**  
mins

### Step 5

Slide the flue on. No fixings required for this unless an extension has been ordered.



### Step 6

Enjoy!

*These installation instructions are a guide only. Contact Trendz to get a full set of detailed installation instructions.*