

OUTDOOR FIRE

Mini Burton™

This modern-looking fireplace gives a contemporary finish to any outdoor space. The optional corten steel wood box surround gives the Mini Burton an ever so slight hint of ruggedness. Ideal for modern outdoor spaces, our smallest fireplace suits almost any entertaining area.

Mini Burton package includes:

- 1 x Prefabricated reinforced concrete structure
- 1 x 6mm black steel firebox
- 1 x Black stainless steel flue (1500h x 300ø)

Dimensions: 2600h x 1400w x 650d

Weight: 1000kg



Model displayed with optional accessories



MINI BURTON™


Dimensions



Model displayed with optional accessories

MINI BURTON™

Dimensions

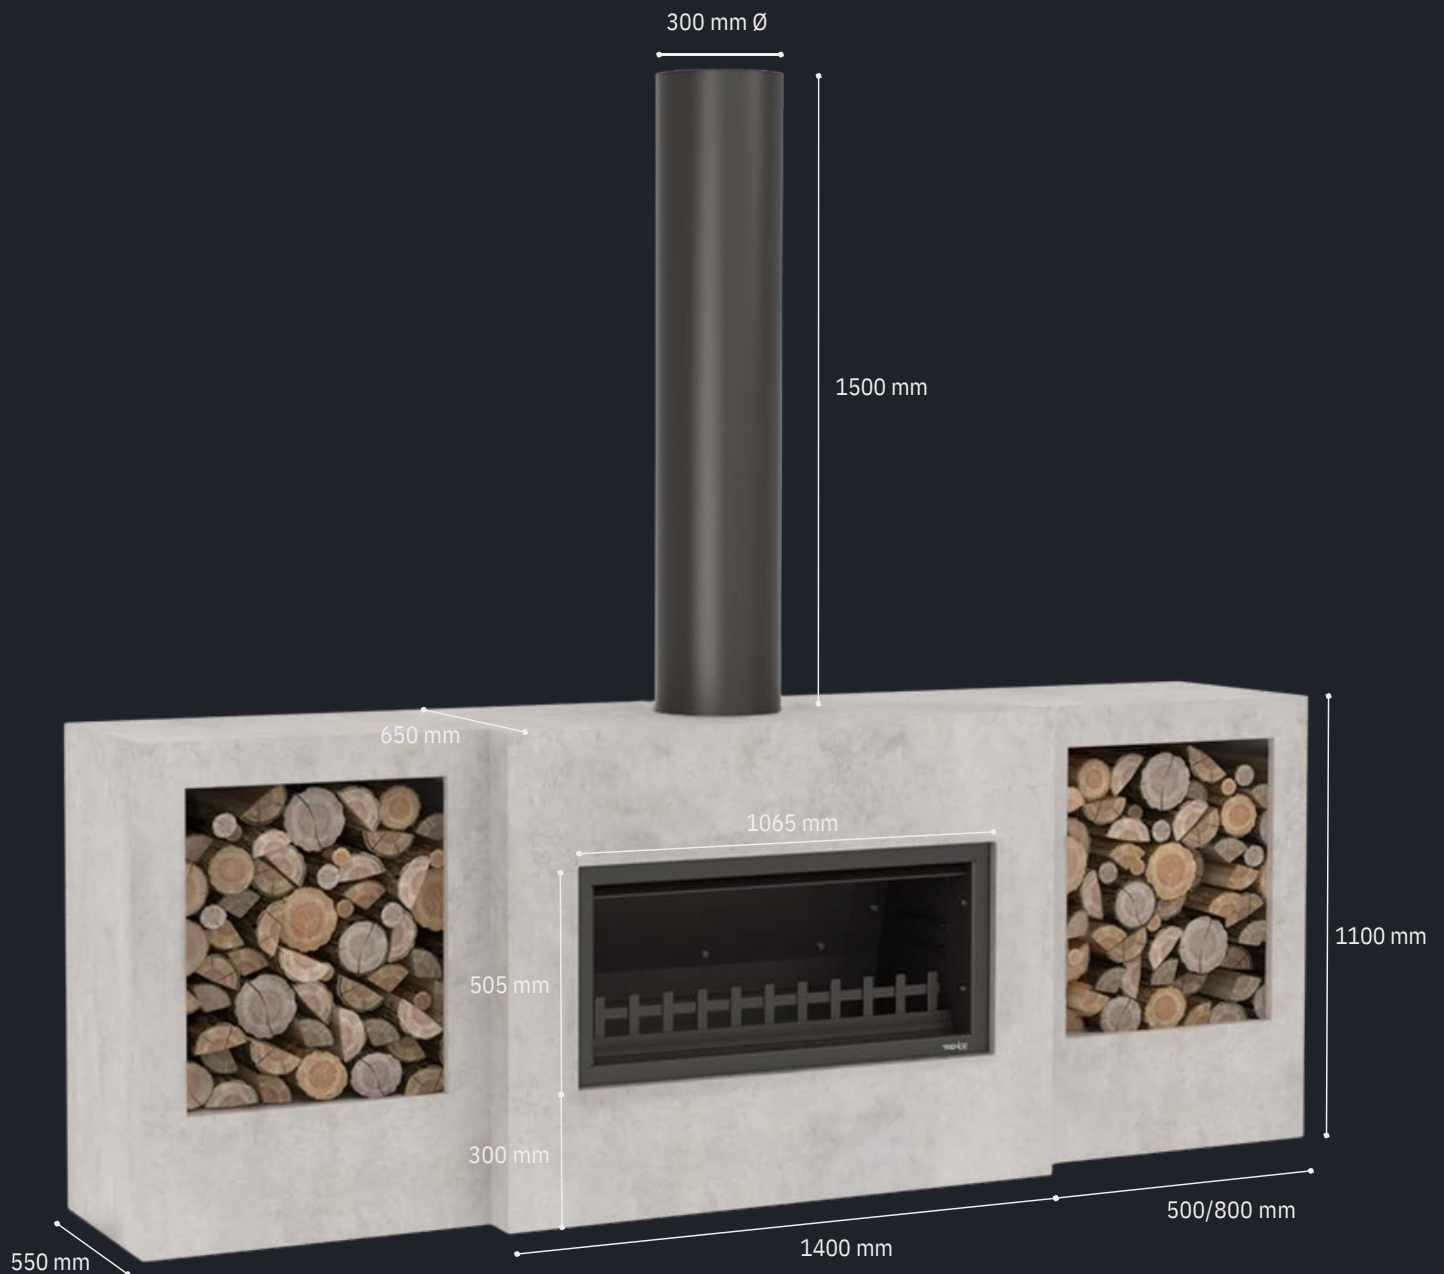

Model displayed with optional accessories

MINI BURTON™

Installation

Delivered as a concrete shell with firebox and your choice of accessories. There are just six simple steps to installing a Trendz Outdoor Fireplace.



Step 1

Contract out or DIY a concrete pad for the fireplace to sit on.



Step 2

Trendz delivers the fireplace to a depot. A Hiab truck is required to bring the fireplace to your site and place the fireplace onto your concrete pad.



Step 3

Fill the inside of your fireplace from the bottom up to the opening with concrete.



Step 4

Your fireplace comes bare concrete. Attach accessories, then plaster or clad.



Step 5

Assemble the steel firebox.



Step 6

Enjoy!

These installation instructions are a guide only. Contact Trendz to get a full set of detailed installation instructions.

MINI BURTON™

Installation

with plaster & paint finish

The Mini Burton fireplace can be delivered already plastered and painted, making the installation process faster. Talk to our team to discuss your plaster and paint options.



Step 1

Contract out or DIY a concrete pad for the fireplace to sit on.



Step 2

Trendz delivers the fireplace to a depot. A Hiab truck is required to bring the fireplace to your site and place the fireplace onto your concrete pad.

 **30**
mins



Step 3

Fix fireplace to the concrete pad with brackets if needed.

 **20**
mins



Step 4

Attach wood boxes if ordered with the fireplace.

 **20**
mins



Step 5

Slide the flue on. No fixings required for this unless an extension has been ordered.

 **05**
mins



Step 6

Enjoy!

These installation instructions are a guide only. Contact Trendz to get a full set of detailed installation instructions.